


# Monarch Screen

<When the operation is not smooth...>



Make sure if there is any space between the Sliding Bar Bottom Cap and the Bottom Rail. If not, confirm following points.

Space between the Sliding Bar Bottom Rail and the Bottom Rail.

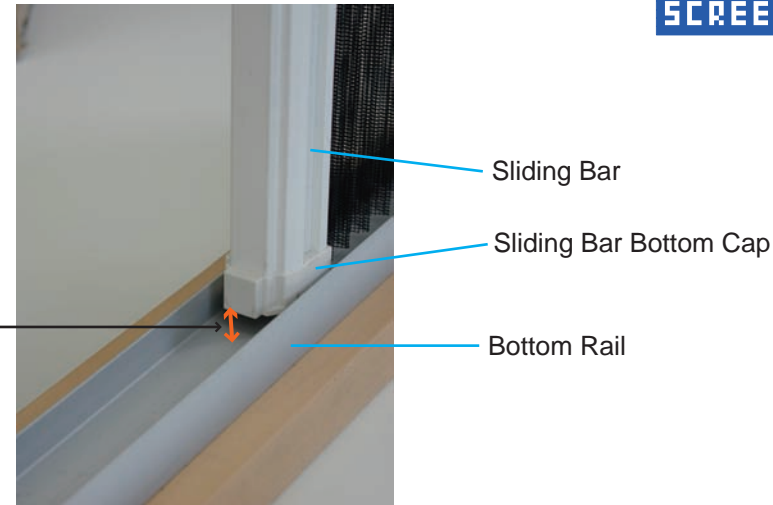

a. Confirm the Mounting Bracket is pushed up, ensuring that the top of the Corner Cover is tight against the upper portion of the door frame. If not refer to the following instruction to fix.

b. If it is not improved with the procedure “a” , the cause may be on cutting procedure or on the condition of the door frame (the mounting surface must be flat and flush, and at the right angle ( 90° ) to the door). Refer to the installation manual for making sure.

1. Remove the Catch Frame and the Top Rail.
2. Move the Sliding Bar and Mesh off to the side as indicated in the illustration.
3. Remove the screws fixing the Mounting Bracket from the door frame.
4. Push the Mounting Bracket upwards, ensuring that the top of the Corner Cover is tight against the upper portion of the door frame.
5. Re-secure the Mounting Bracket to the door frame with screws.

